



## Adjusting Procedure for Combination Bearings with Eccentric Pin

- 1 Remove front side screws.
- 2 Turn axial bearing  
(eccentric axle will be turned)
- 3 Check distance A  
(if necessary repeat step 2)
- 4 Apply loctite and secure  
front side screws.

